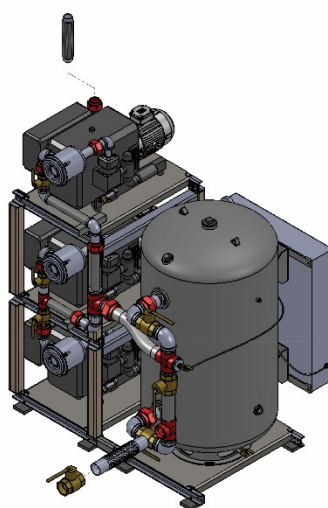


## C750B-STT3-V240 – Oil-Less Rotary Claw Vacuum System

	Configuration:	Triplex Stack Mount
	System Capacity:	138 SCFM
	Capacity per Pump:	69 SCFM
	Motor Horsepower:	7.5 HP
	Total System Horsepower:	22.5 HP
	Receiver Size:	240 Gallons
	Available Voltage:	208/230/460 3 phase Contact Factory for Other Voltages
	<b>Note: System capacity is stated with one pump in reserve</b>	

### Vacuum Pump Module:

- Oil-less rotary claw vacuum pumps with non-contacting pump chamber
- Each pump has: inlet vacuum filter, inlet check valve and exhaust temperature switch.
- Pump isolation valves for ease of service

### Air Receiver:

- Constructed to ASME standards
- Rated for full vacuum
- Equipped with valved bypass
- High visibility vacuum gauge
- Source isolation valve included
- Mounting pads and flex connectors included

### System Controls:

- Underwriters Laboratories listed
- Nema 12 enclosure
- Safety disconnect handles
- Fuseless design
- HMI (human machine interface) system
- All NFPA required local alarms with contacts for remote master alarms